

**THE PHONE COMES SET FOR  
3 MINUTES, FREE 0, FREE 800,  
1+411 .25, RINGER ON**

MODEL  
**707**

**PHONE 281 550 5592**

**FAX 281 550 1028**

**G-TEL**

1. Place small padlock over locking coin box door lever at rear of phone. This will protect against unauthorized access to the coins.
2. Plug line cord into any standard RJ11 single line telephone jack (NOTE: You must have Touch Tone Service). Press the hook switch slowly a few times to insure that all mechanics are in position.
3. This phone will operate as an ordinary coin-less phone when the owner's key is inserted and turned (owner's key is shipped in the coin box). When the key is removed, it will function as a payphone.
4. Follow the calling instructions shown on the front faceplate of the phone to make a call.
5. The dip switches are installed at the bottom of the phone.  
Functions of the dip switches are as follows:

**Unscrew the phillips screw  
and slide the plate out to  
find the dip switches.**

SWITCH	UP	DOWN	FUNCTIONS
1	U	D	-free call to the operator -restricted call the operator
2	U	D	-free call to 411 and 1411 -pay call to 411 and 1411
3	U	D	-unlimited time outgoing calls -time limit on outgoing calls (see switch combinations below)
8	U		-unlimited time incoming calls
9	U	D	-ringer ON -ringer OFF
10	U	D	-for factory test only -Normal setting

DIP SWITCH FUNCTIONS								
TIME LIMIT	4		5		6		7	
	UP	DOWN	UP	DOWN	UP	DOWN	UP	DOWN
1 MIN		X		X		X		X
2 MIN	X			X		X		X
3 MIN		X	X			X		X
4 MIN	X		X			X		X
5 MIN		X		X	X			X
6 MIN	X			X	X			X
7 MIN		X	X		X			X
8 MIN	X		X		X			X
9 MIN		X		X		X	X	
10 MIN	X			X		X	X	
11 MIN		X	X			X	X	
12 MIN	X		X			X	X	
13 MIN		X		X	X		X	
14 MIN	X			X	X		X	
15 MIN		X	X		X		X	
16 MIN	X		X		X		X	

**THE OWNERS KEYS ARE IN THE COIN BOX.  
PULL OUT TAB ON BACK OF THE PHONE  
TO GET IN THE COIN BOX. PUT A PAD  
LOCK ON THE TAB TO PROTECT THE CASH**