

## Instruction Manual

TRADEMARKS ARE PROPERTY OF THEIR RESPECTIVE OWNERS

## Wireless Sensor DolphinBar

### Description:

Wireless Sensor DolphinBar can connect your Wii Remote Plus Controller to your PC by Bluetooth. Support Nunchuk Controller and Wii Classic Controller. Support four working modes: Keyboard and Mouse Mode (LED1), Keyboard and Mouse Game Mode (LED2), Game Controller Mode (LED3) and Wii Remote Controller Emulator Mode (LED4).

### Features:

1. Wireless Sensor DolphinBar can connect your Wii Remote Plus Controller to your PC by Bluetooth.
2. Supports TR WiiMotes
3. Supports the newest Dolphin 4.0-2241 and above
4. Easy and simple operation, no need extra Bluetooth dongle.
5. Supports Cursor Anti-Shake function.
6. Allows you to play more quickly and precisely with your Game Controller, Light Gun or Racing Wheel.
7. Works as a normal keyboard and mouse.
8. Works as a PC Remote Controller. You can return or skip to the beginning of the current, previous or next chapter,

- and supports Fast reverse, Fast forward, Pause playing, etc
9. Works as a Game Light Gun. You can play all kinds of PC Shooting Games, and PC or Wii Light Gun is well supported.
10. Works as a wireless Game Controller. Connects your Wii Remote Controller, or Wii Remote Controller + Wii Nunchuk, or Wii Remote Controller + Wii Classic Controller to your PC. Supports the G-sensor function that is the best choice for the Racing Games. Supports the Vibration Feedback.
11. Compatible with the Wii Emulator Dolphin. Supports up to 4 of the Wii Remote Controllers. Compatible with Windows XP, Vista and Windows 7, Windows 8, 32 bit and 64 bit, Mac OS.

### LED and Switch Instruction

#### 1. SYNC Button and LED 0

-For the initial syncing, press the "SYNC" button on the DolphinBar itself and on the bottom of your controller, you'll find that the 4 blue LEDs on your controller and the LED 0 on the DolphinBar will flash quickly. Once the syncing process is complete, the LED on the DolphinBar and your controller will stay lit.

-There are three statuses for LED 0, flash slowly, flash quickly and stay lit. If the Wii Remote Controller does not

connect, the LED 0 will flash slowly; if the Wii Remote Controller connects successfully, the LED 0 will stay lit; if you press the SYNC button and start syncing, the LED 0 will flash quickly.

## 2.MODE Button and LED 1, LED 2, LED 3, LED 4

2.1 Switch to four different modes, Keyboard and Mouse Mode (LED1), Keyboard and Mouse Game Mode (LED2), Game Controller Mode (LED3) and Wii Remote Controller Emulator Mode (LED4) by pressing the MODE button on the DolphinBar

2.2 Switch to four different modes by using the key combination on the Wii Remote Controller

- Keyboard and Mouse Mode (LED1): "HOME" + Direction Button "DOWN"
- Keyboard and Mouse Game Mode (LED2): "HOME" + Direction Button "LEFT"
- Game Controller Mode (LED3): "HOME" + Direction Button "UP"
- Wii Remote Controller Emulator Mode (LED4): "HOME" + Direction Button "RIGHT"

2.3 The default mode is the Keyboard and Mouse Mode (LED1). The changes will be saved automatically after you switch to your desired mode.

## 3. TOP/BOTTOM Button

- Switch to "TOP" if the DolphinBar is on the top of the monitor
- Switch to "BOTTOM" if the DolphinBar is at the bottom of the monitor

## Modes and Buttons Instruction

### 1.Keyboard and Mouse Mode (LED 1 on the DolphinBar)

-It supports one Wii Remote Controller only. The Nunchuk and Wii Classic Controller are not supported. The Wii Remote Controller will go to the Sleep mode automatically if no movement for more than 10 minutes.

-Two statuses for this mode. The Normal Keyboard and Mouse Status (The blue LED 1 and 2 on your Wii Remote Controller will light) and the Multimedia Status (The blue LED 1 and 3 on your Wii Remote Controller will light). These two statuses can be exchanged by pressing the Button "HOME" + Direction Button "Down"

-The Normal Keyboard and Mouse Status Button Instruction (The blue LED 1 and 2 on your Wii Remote Controller will light)

Wii Remote Controller	IR Camera	A	B	+	-	+	⌂	1	2	⏻
Keyboard and Mouse	Mouse Moving	Mouse Right Button	Mouse Left Button	Mouse Scroll Wheel Up	Mouse Scroll Wheel Down	Windows Icon	PageUp	PageDown	Shut off the connection	

The Multimedia Status (The blue LED 1 and 3 on your Wii Remote Controller will light)

Wii Remote Controller	IR Camera	A	B	UP	RIGHT	DOWN	LEFT	-	+	⌂
Keyboard and Mouse	Mouse Moving	Mouse Right Button	Mouse Left Button	⏻	⏮	⏭	⏪	Decrease Volume	Increase Volume	Windows Icon

Wii Remote Controller	1	2	⏻
Keyboard and Mouse	⏮	⏭	Shut off the connection

## 2.Keyboard and Mouse Game Mode (LED2 on the DolphinBar)

-It supports one Wii Remote Controller or one Wii Remote Controller + Nunchuk. The Wii Remote Controller will go to the Sleep mode automatically if no movement for more than 10 minutes.

## 2.Keyboard and Mouse Game Mode (LED2 on the DolphinBar)

-It supports one Wii Remote Controller or one Wii Remote Controller + Nunchuk. The Wii Remote Controller will go to the Sleep mode automatically if no movement for more than 10 minutes.

-Button Instruction (The blue LED 1 and 4 on your Wii Remote Controller will light)

Wii Remote Controller	IR Camera	A	B	+	-	+	⌂	⏻
Keyboard and Mouse	Mouse Moving	Mouse Right Button	Mouse Left Button	⏻	Esc	Enter	Windows Icon	Shut off the connection

Nunchuk	Z	C	⌂
Keyboard and Mouse	Mouse Left Button	Mouse Right Button	⏻

## 3.Game Controller Mode (LED3 on the DolphinBar)

-It supports up to 4 of Wii Remote Controllers. Connects your Wii Remote Controller, or Wii Remote Controller + Wii Nunchuk, or Wii Remote Controller + Wii Classic Controller to your PC. The Wii Remote Controller will go to the Sleep mode automatically if no movement for more than 10 minutes.

-Wii Remote Controller Button Instruction

Wii Remote Controller	1	2	A	B	-	+	⌂	+	G-sensor
PC	1	2	3	4	5	6	12	Left joystick POV	No function or Left joystick

-Wii Remote Controller + Nunchuk Button Instruction

Wii Remote Controller	IR Camera	1	2	A	B	-	+	⌂	+
PC	Right joystick	1	2	3	4	5	6	12	POV
Nunchuk	Z	C	⌂						
PC	7	8	Left joystick						

## -Wii Remote Controller + Wii Classic Controller Button Instruction

Wii Remote Controller	①	②	A	B	-	+	Ⓢ	+
PC	1	2	3	4	5	6	12	Ⓢ

Wii Classic Controller	y	x	b	a	L	R	ZL	ZR	-
PC	1	2	3	4	5	6	7	8	9

Wii Classic Controller	+	Ⓢ	+	Ⓢ	Ⓢ
PC	10	12	Ⓢ	Ⓢ	Ⓢ

### 4.Wii Emulator Mode

Support up to 4 of Wii Remote Controllers. Be compatible with Wii Emulator Dolphin

5.Supports TR WiiMotes and the newest Dolphin 4.0-2241 by installing the updated firmware on MAYFLASH website download page

(Please download the newest Dolphin from the official web site, <https://dolphin-emu.org>).

### 6.How to update your Dolphinbar?

6.1.Download and run the firmware from <http://www.mayflash.com/Support/Download/> (The Item No. is W010, please download the newest firmware).

6.2.Press and hold the "SYNC" button on the DolphinBar, and plug the DolphinBar into the PC USB ((Your Windows will find the new firmware, wait until the recognition is completed).

6.3.Release the SYNC button, and you'll find the Update Firmware button becomes available. Click this button to update.

6.4.Please don't plug out the DolphinBar when it's upgrading.