


Center of Trigger Stick to Center of Spinner  
15 1/2 inches

Top  
43 inches on CP  
40 1/2 inches inside

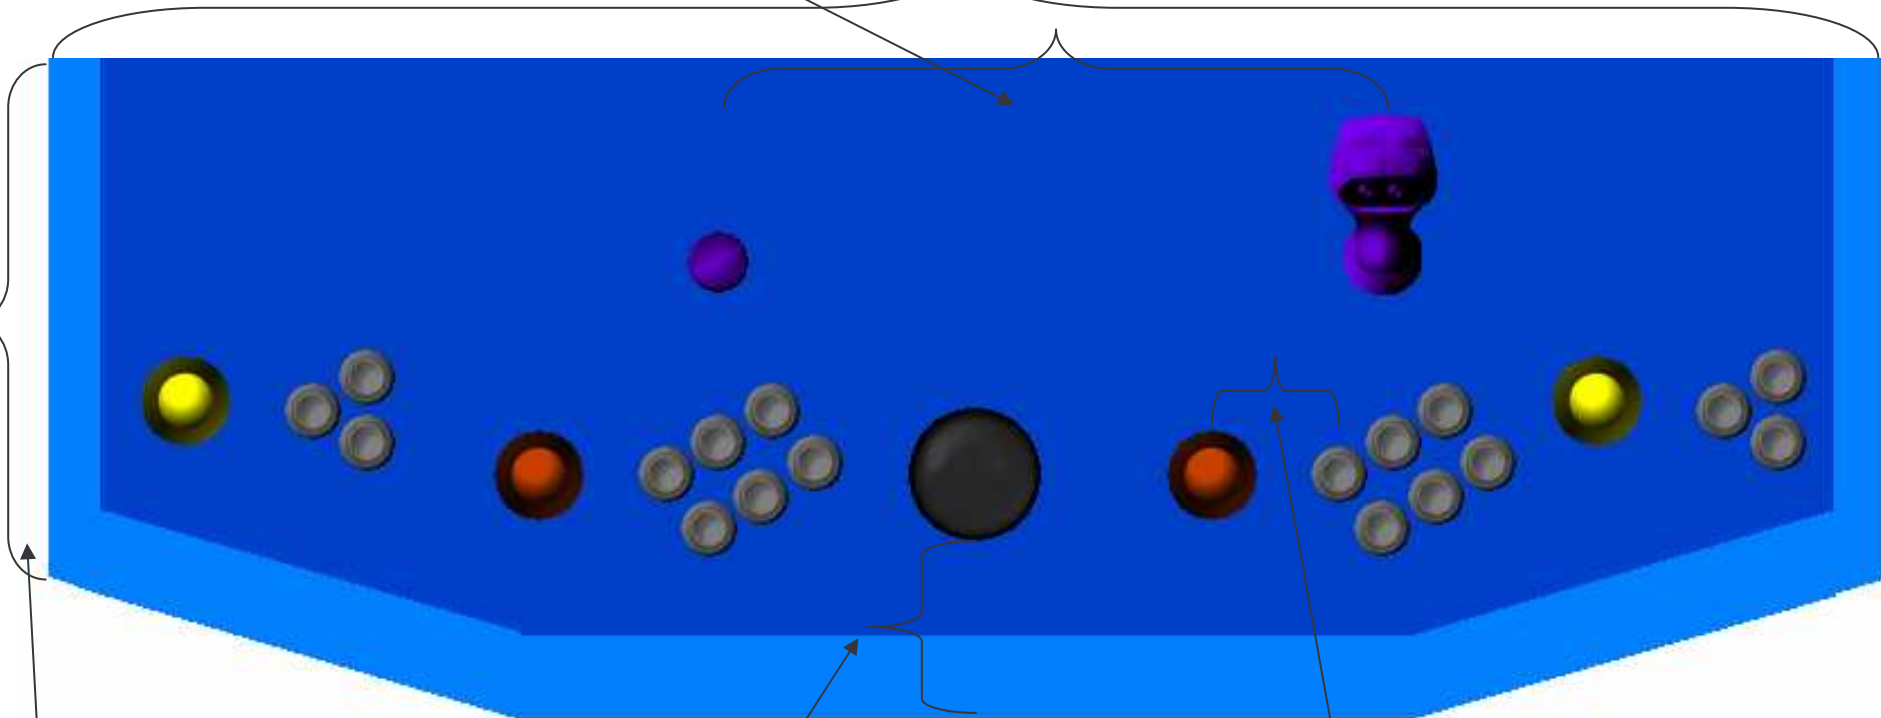

Side  
13 inches on CP  
10 1/2 inches inside

Bottom of Trackball to Edge  
4 inches on CP  
3/4 inch inside

Center of Joystick to Center of Button 1  
2 1/2 inches