





3/4" MDF allows enough depth  
for installing cabinet Hinges.


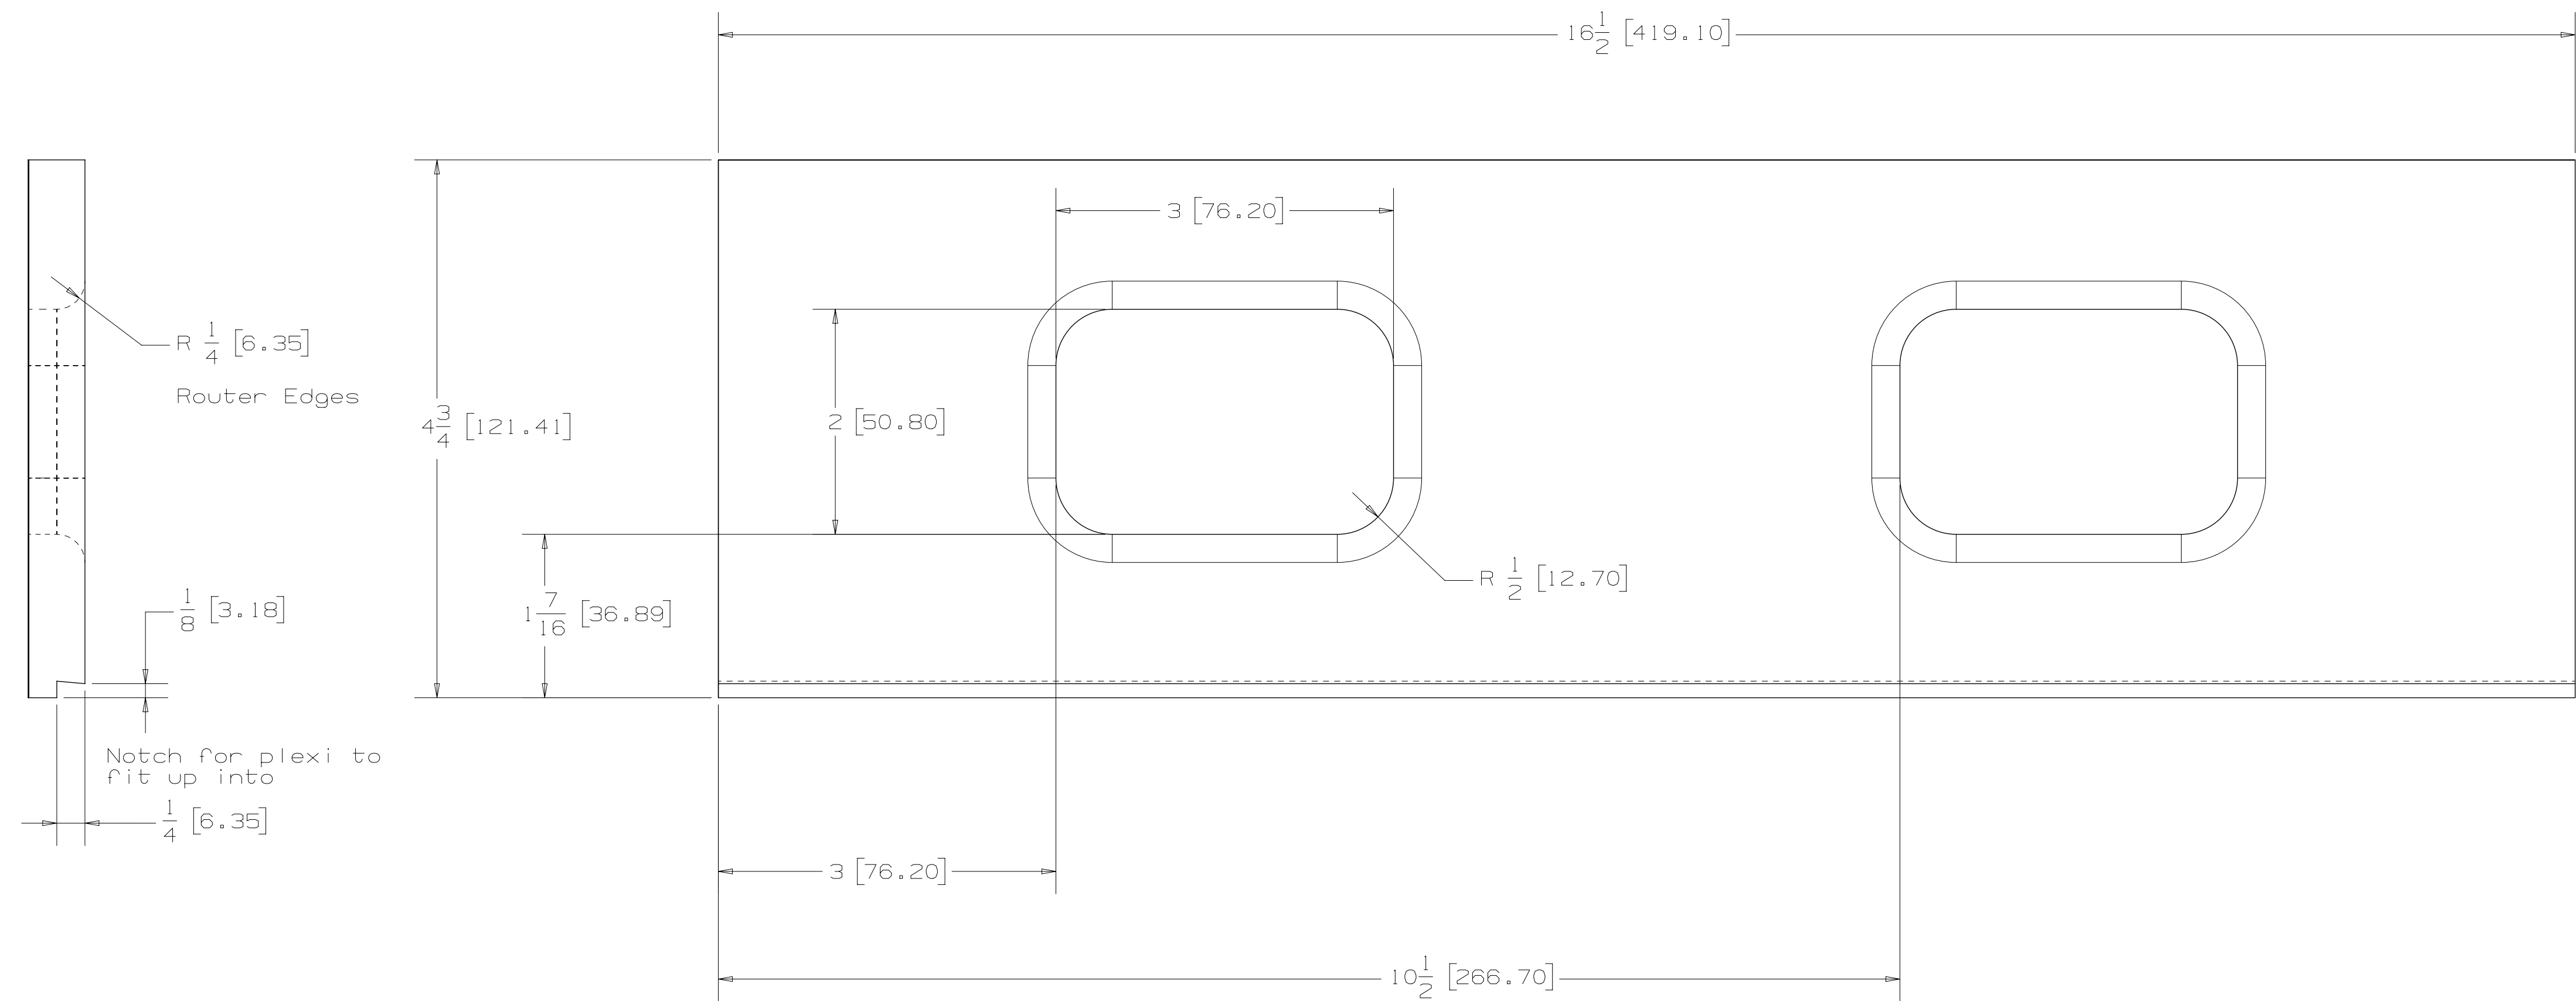


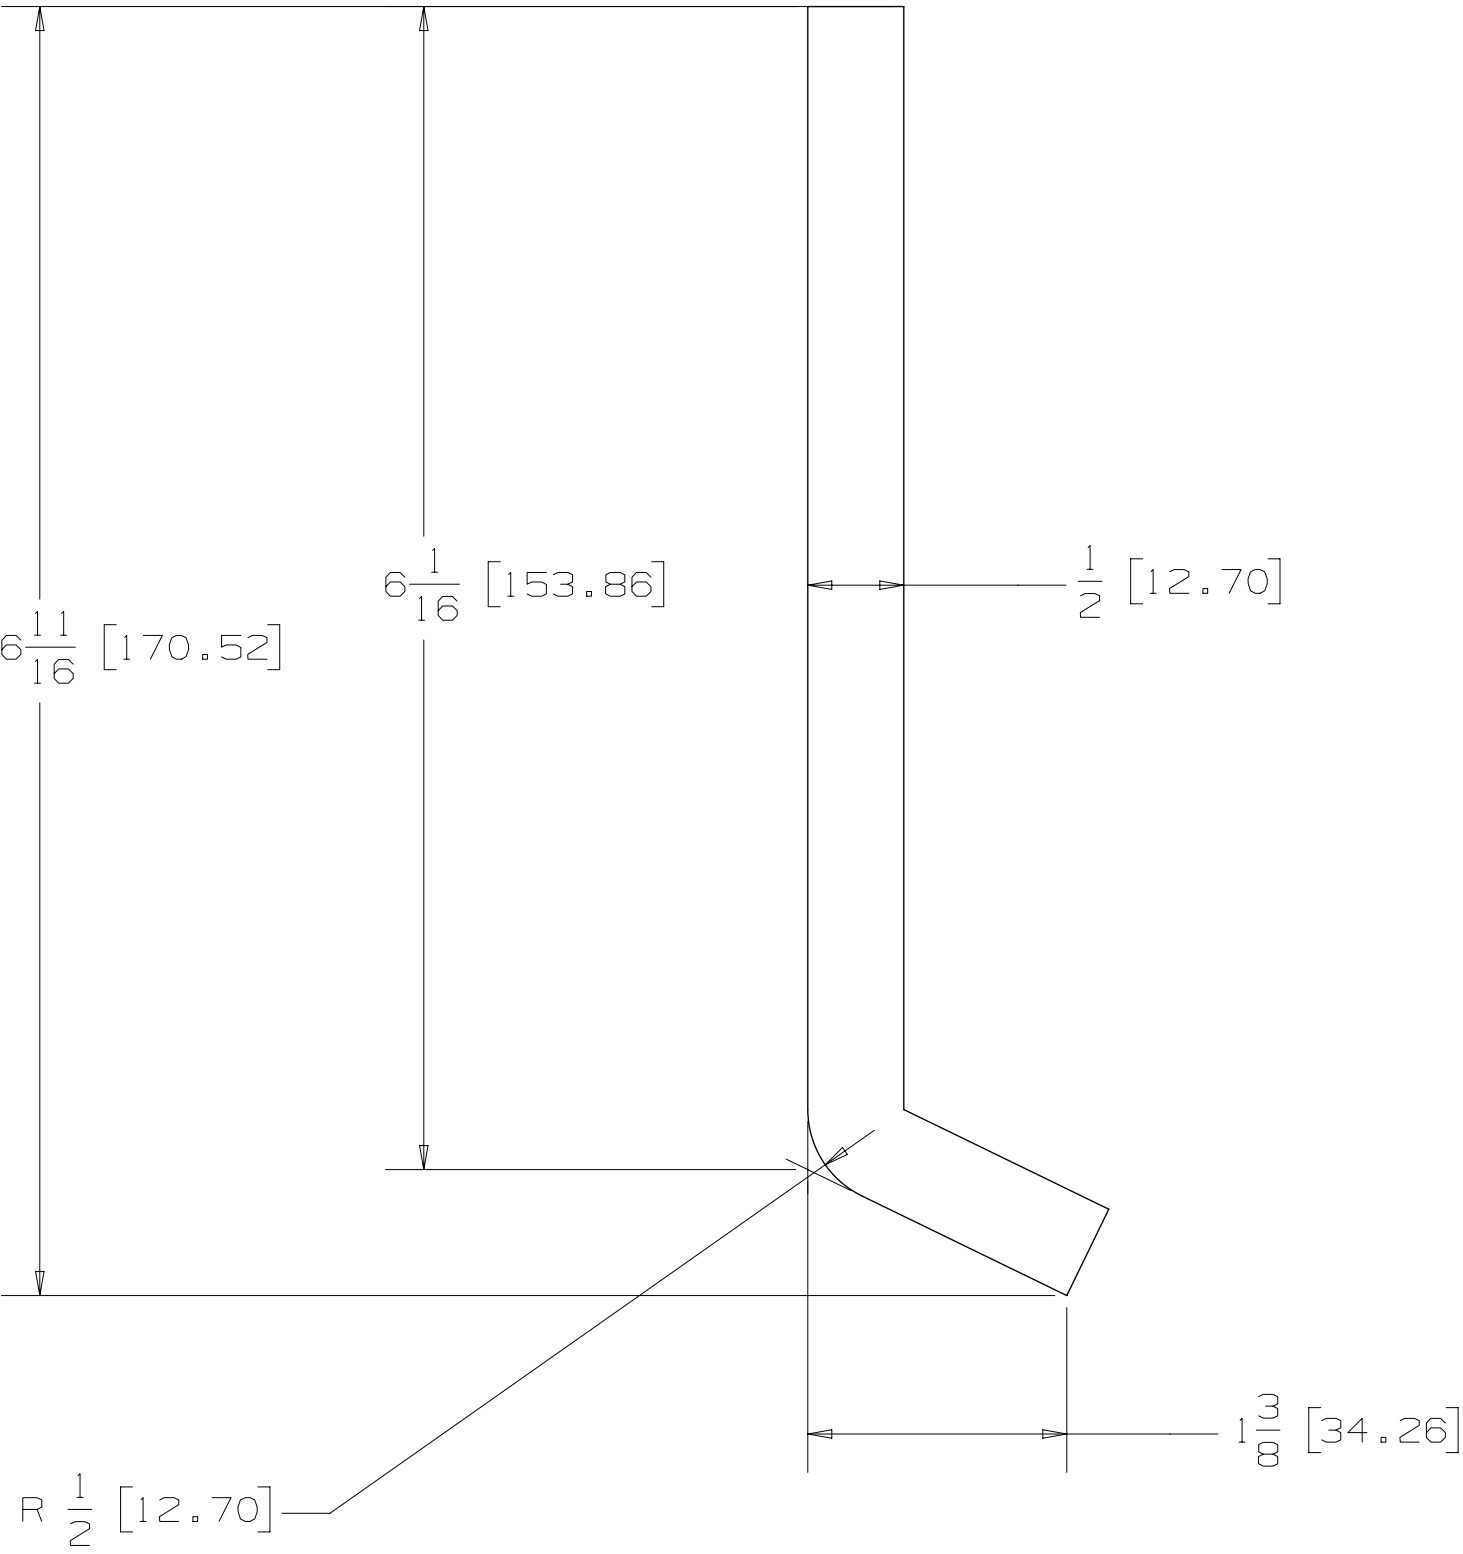



Just sand down to a radius after glue dries.

Miter two pieces and glue them together. Use a jig made of scrap battens and clamps to keep everything in place. Refer to post for pics.

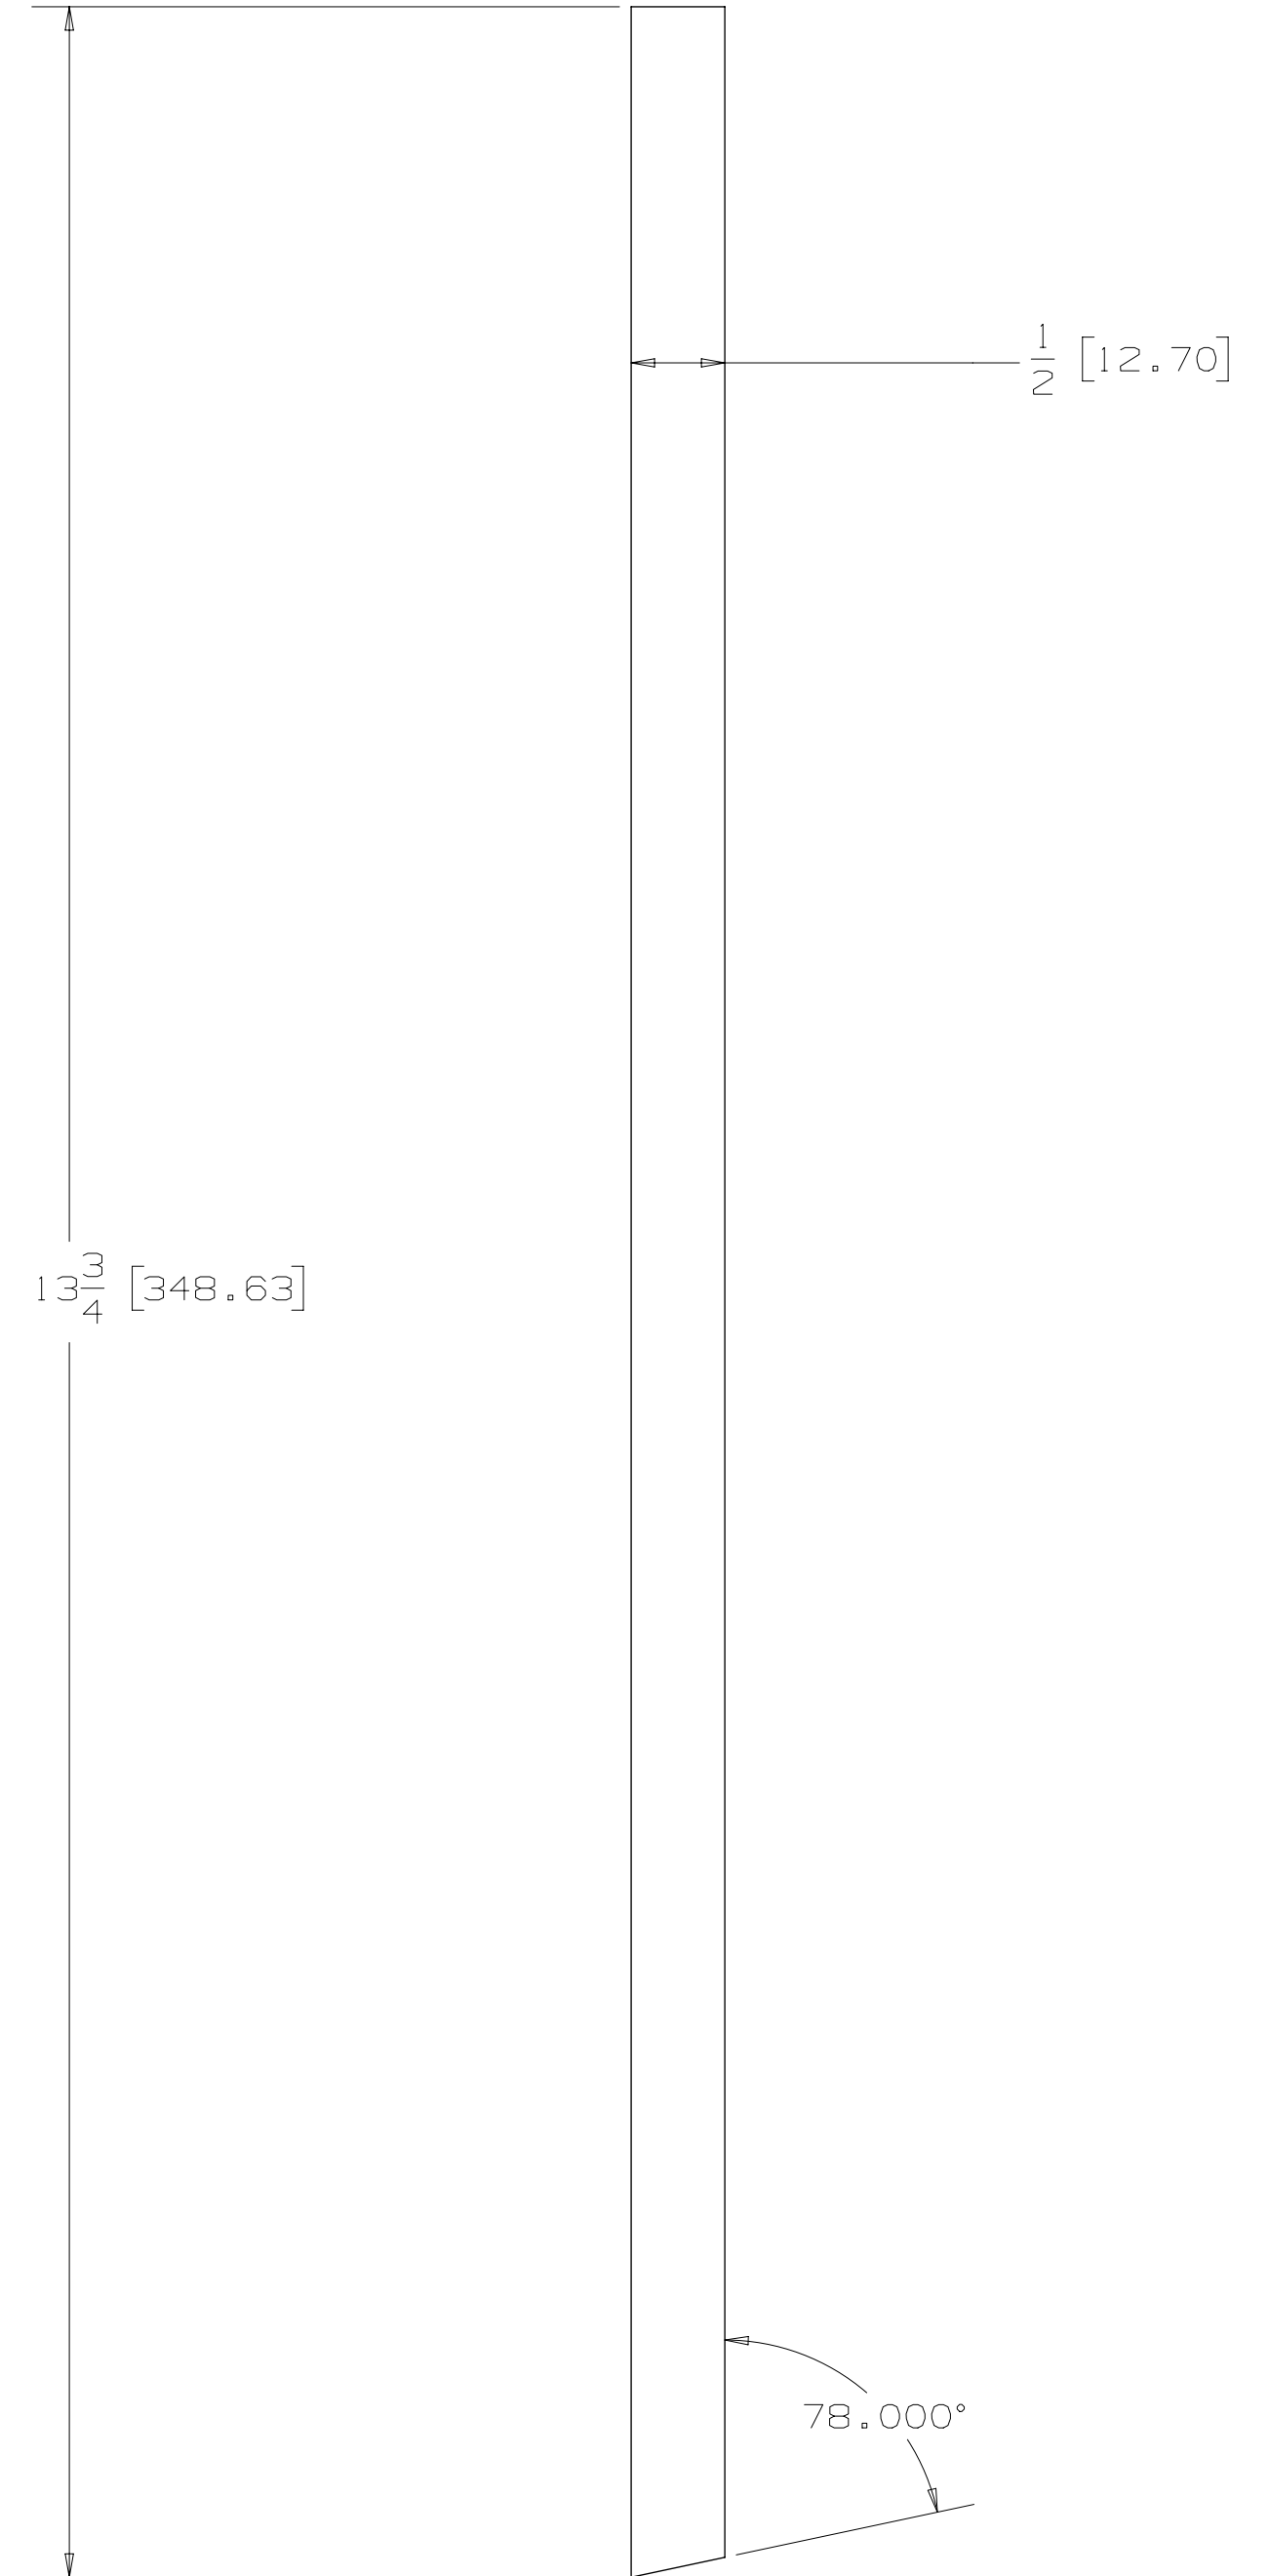

Slight angle to match up with control panel. No need to be super precise.

