


PCB bottom view.

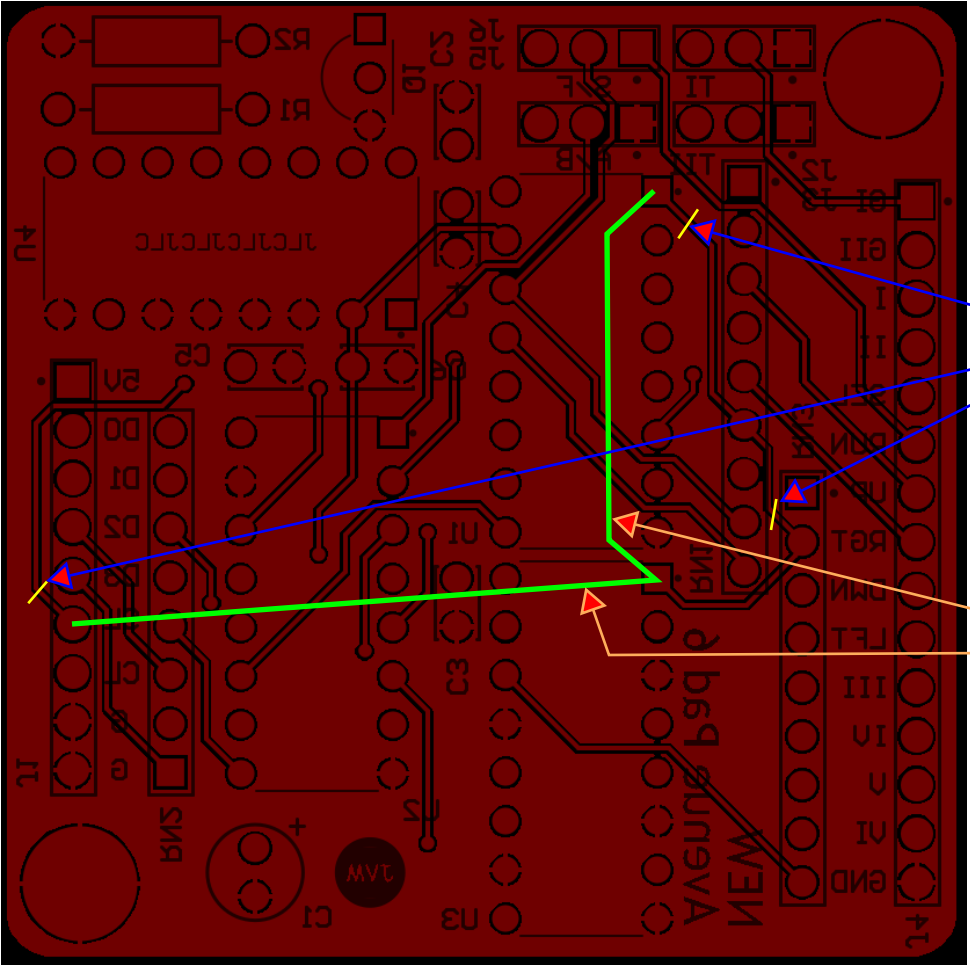

PCB bottom view.

Cut traces at locations shown in yellow.

Add two jumper wire as shown in green.